




twentytwodesigns.com

HammerHead Mounting Template

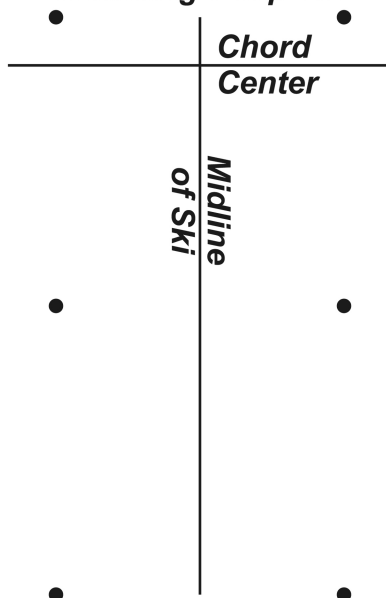

Mounting Steps:

- 1) Find and mark chord center.
- 2) Tape the template to the ski after aligning a number matched pair of lines over the ski edges and aligning the chord center line over the chord center mark.
This is the most important step so please take plenty of time to align the template correctly.
- 3) Center punch the 6 toe-piece mounting holes.
- 4) Align the boot pin holes over the chord center and mark the back of the boot heel.
- 5) Realign the template so that the back of boot heel line is over the mark.
- 6) Center punch the 2 heel-plate mounting holes.
- 7) Drill all eight holes 3/8" deep.
- 8) Mix epoxy and load it into the syringe. Inject epoxy into holes.
Ensure Screws Aren't Too Long
- 9) Screw the shim and toe-piece down.
- 10) Screw the heel plate down.



Back of Boot Heel

Tools Needed: Tape Measure, Pen, Adhesive Tape, Hammer, Nail, Drill, 9/64" Drill Bit, #3 Pozidrive Driver